

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

51	52	53	54	55	56	57	58	59	60	61
62	63	64	65	66	67	68	69	70	71	72

Pin	OEM Pin	ECU Pin	Function	Pin	Pin	ECU Pin	Function
1	4Y			51	1U	Aux 14	Fuel Pump
2	4W	INJ3	Injection	52	1S		
3	4U	INJ1	Injection	53	1Q	DI1	STP Brake
4	4S			54	1O	AN Volt 4	MAF
5	4Q	Aux1	Idle Control Motor	55	1M	DI3	SPD
6	4O	Aux 12	EGR Vent	56	1K	DI 2	AC Sw
7	4M			57	1I	Aux 8	TEN
8	4K			58	1G	Aux 5	AC Relay
9	4I	nc	Battery 12V	59	1E	DI7	CE Light
10	4G	Trig2	Cam Sig	60	1C	+14V	Ign + (96 only)
11	4E			61	1A	Aux 7	Cooling Fan
12	4C	GND	GND (inj)	62	1V		
13	4A	GND	GND	63	1T		
14	4Z			64	1R		
15	4X	INJ4	Injection	65	1P	DI 6	Heater Fan
16	4V	INJ2	Injection	66	1N		
17	4T	Aux 11	Purge	67	1L	DI 4	Clutch SW
18	4R	IGN 2	IB2	68	1J		
19	4P	Aux 13	EGR Vac	69	1H	DI 5	Headlamp
20	4N	IGN 1	IB1	70	1F		
21	4L	Aux 2	Tacho	71	1D		
22	4J	Aux 3	PRC Solenoid	72	1B	Aux 6	AC Fan
23	4H						
24	4F	Trig1	Crank Sig	On Board MAP		AN Volt 10	MAP
25	4D	GND	GND	On Board WBO2		AN Volt 11	Lambda 1/Wideband O2 Input
26	4B	+14V	+B Switched 12V				
				Expansion 1	Expansion 1	INJ 5	
				Expansion 2	Expansion 2	INJ 6	
31	3O	GND	GND	Expansion 3	Expansion 3	IGN 3	
32	3M	Aux4	Frt O2 HT Gnd	Expansion 4	Expansion 4	IGN 4	
33	3K	AN Temp 2	IAT	Expansion 5	Expansion 5	IGN 5	
34	3I	5V	+5V Reference	Expansion 6	Expansion 6	IGN 6	
35	3G	An Temp 1	ECT	Expansion 7	Expansion 7	IGN 7	
36	3E			Expansion 8	Expansion 8	IGN 8	
37	3C	AN Volt 1	O2 Front				
38	3A						
39	3P	AN Temp 3	IAT	Expansion 9	Expansion 9	GND	
40	3N			Expansion 10	Expansion 10	+5V	
41	3L	Knock 1	IDL	Expansion 11	Expansion 11	DI 8	
42	3J	Aux 15	EGR Position	Expansion 12	Expansion 12	DI 9	
43	3H			Expansion 13	Expansion 13	AN Volt 5	
44	3F	AN Volt 2	TPS	Expansion 14	Expansion 14	AN Volt 6	
45	3D		O2 Rear	Expansion 15	Expansion 15	AN Volt 7	
46	3B	AN Volt 3	MAF	Expansion 16	Expansion 16	AN Volt 8	